



## Keys

### ► With power back door



CLYQGAA135


### ► Without power back door



CLYQGAA135

- 1** Master keys  
These keys work in every lock.
- 2** Valet key  
This key cannot lock/unlock the glove box.
- 3** Key number plate  
Keep the plate in a safe place, such as your wallet. Do not keep the plate in the vehicle.
- 4** Flat key  
This key works in every lock.  
Lexus recommends that you always carry the flat key with you for emergency use.

## Wireless Remote Control

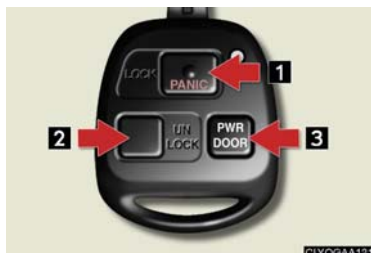

### ► With power back door

#### 1 Press: locks all doors

**Press and hold:** sounds the alarm


(Use the alarm to attract attention to the vehicle in order to help deter break-ins. To stop the alarm, press any button on the wireless remote control.)

#### 2 Press once: unlocks the driver's door

**Press twice:** unlocks all doors

**Press and hold:** opens the windows\*

#### 3 Press and hold: opens or closes the back door

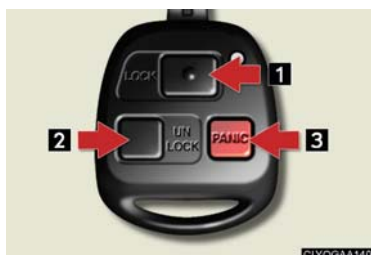

### ► Without power back door

#### 1 Press: locks all doors

#### 2 Press once: unlocks the driver's door

**Press twice:** unlocks all doors

**Press and hold:** opens the windows\*

#### 3 Press and hold: sounds the alarm

(Use the alarm to attract attention to the vehicle in order to help deter break-ins. To stop the alarm, press any button on the wireless remote control.)

\*: On vehicles with a standard moon roof, the moon roof will also open.



## Theft Deterrent System

The theft deterrent system includes the following features to help protect your vehicle from theft.

### Engine immobilizer system



The engine immobilizer system prevents the engine from being started in the event that an attempt is made to start the vehicle using an unregistered key.

The security indicator light flashes to indicate that the system is set.


### Alarm

The alarm detects forcible entry and attracts attention to the vehicle by sounding the horn and flashing the exterior lights in the event that an attempt is made to forcibly open the doors or hood that have been locked.

**To set the alarm:** lock all the doors from outside the vehicle. When all the doors are locked, the security indicator light comes on to indicate that the alarm is in its preparation state. The indicator light begins to flash after approximately 30 seconds to indicate that the system is armed.

**To deactivate or stop the alarm:** unlock the doors using the key or the wireless remote control, or turn the ignition key to the ON position. (The alarm will stop after several seconds.)

### Steering lock

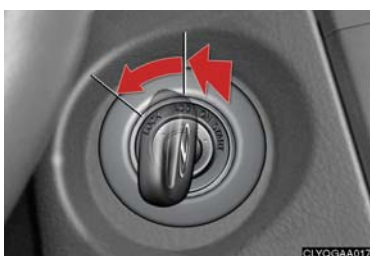

The steering wheel locks when the ignition key is turned to the LOCK position.